


## Zimx ZX Flash Kids Electric Scooter EAN 5060396831225

### Additional Daily Care and Maintenance

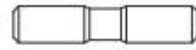



Pivot Pin



Grub Screw



Allen key

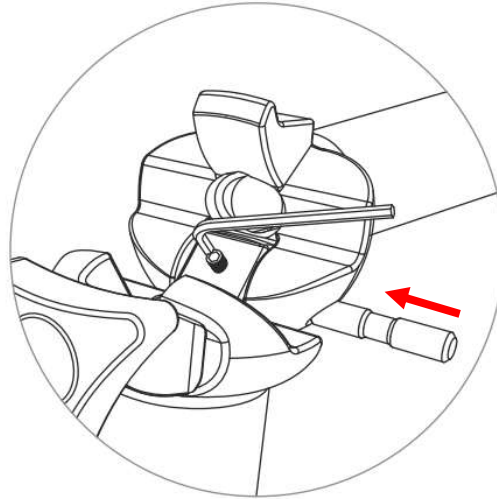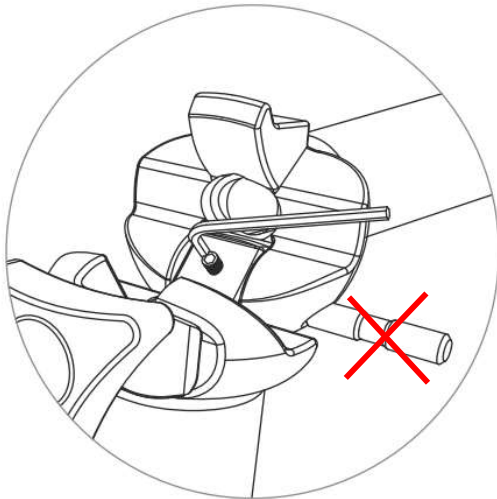

1. Before every use of the scooter please ensure the Pivot Pin is centered within the hinge before tightening the grub screw.
2. Ensure the Grub Screw is fully tight and secure using the enclosed / provided 2.2mm Hex / Allen Key. If this is not fitted correctly the Pivot Pin may fall out during use.
3. If required, to center the Pivot Pin, loosen the Grub Screw then center the Pivot pin with the Allen key. Then retighten the Grub Screw ensuring it is fully tight and secure before the rider uses the scooter.

The Grub Screw holds the connecting Pivot Pin in place so that both parts of the handlebar are securely connected together.

If you should require any further advice then please contact ZIMX customer service team on the following details, so that they may assist you further;

Tel: 0121 454 7589

Email: [info@zimx.uk](mailto:info@zimx.uk)